

고성능 라디에이터 누수방지제 RADIATOR SEAL HP



엔진이 따뜻할 때 냉각 회로에 직접 주입한다. Add only to the compensating reservoir if coolant is flowing through it. Then allow the engine to run for at least 10 minutes until the thermostat opens and the heater gives off noticeable heat. Then stop the engine, check the coolant again and add more if necessary. The contents of one can are sufficient for 10 liters of coolant.

용량	Art. No.	P. Qty.
150 mL	5861 500 150	1/12

Seals leaks up to 0.1 mm near cylinder head seals and hose connections, prevents seal sweating and eliminates evaporation loss.

냉각 회로의 먼지필터에 영향을 주지 않음.

실링